

Servo Press JP Series 5 Unit Type

How to Read the Model No. / Serial No.


Plates are affixed to both main unit and controller. Please check both plates.

Identification Plate Positions


〈Press〉

The identification plate location for the press unit varies depending on the pulley box placement.


Standard Model

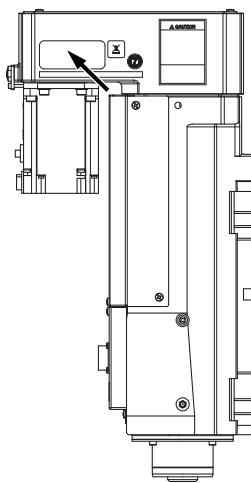


Right Side Pulley Box Model

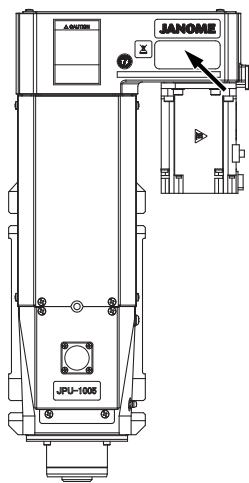


Left Side Pulley Box Model

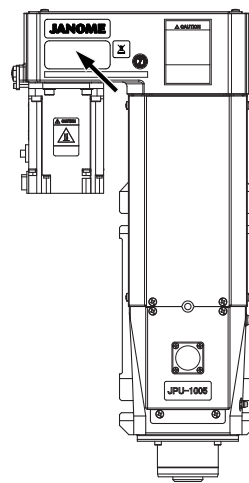


Rear Side Pulley Box Model

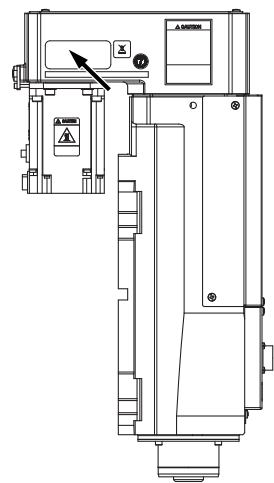


〈Standard Controller〉

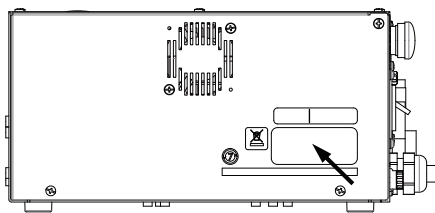

〈Compact Controller〉

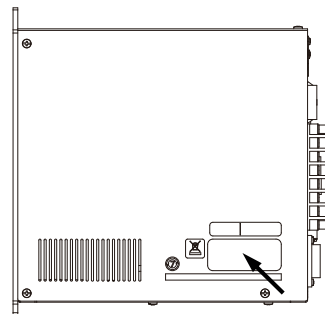

How to Check the Identification Plate

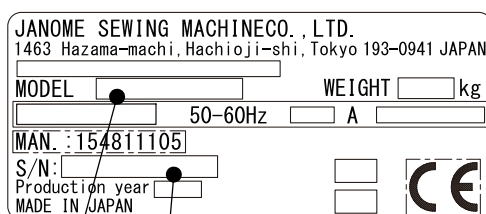

① Model Number

② Serial Number

Example: 16U10N0001