



How to Read the Model No. / Serial No.

Plates are affixed to both main unit and controller. Please check both plates.

Identification Plate Positions

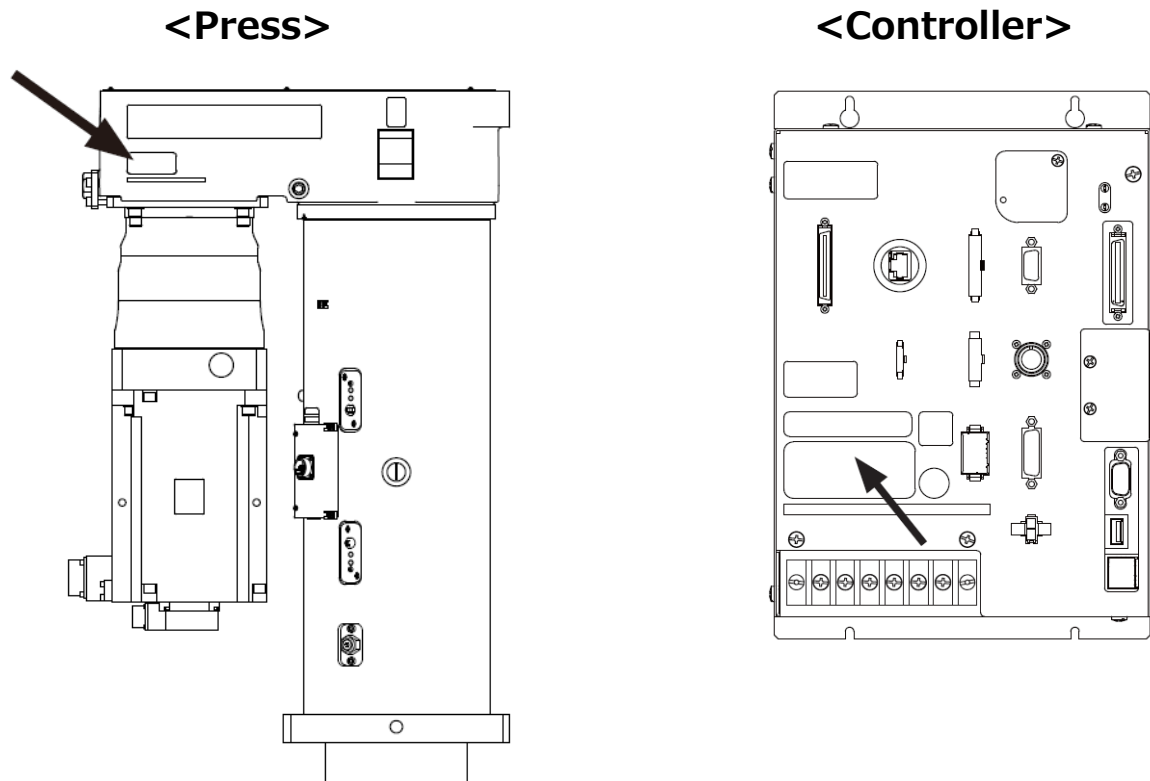

How to Check the Identification Plate

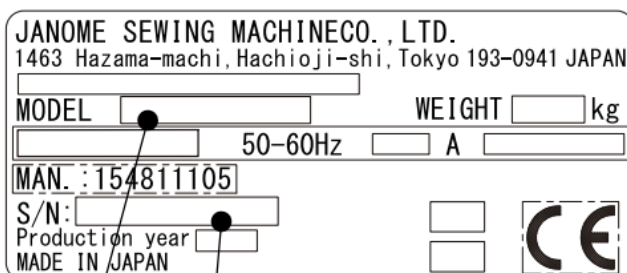

- ① Model Number
- ② Serial Number
Example : 24U3SN0001