


Servo Press JP-S / JP-S2 Series

How to Read the Model No. / Serial No.


Plates are affixed to both main unit and controller. Please check both plates.

Identification Plate Positions


< Press Unit >

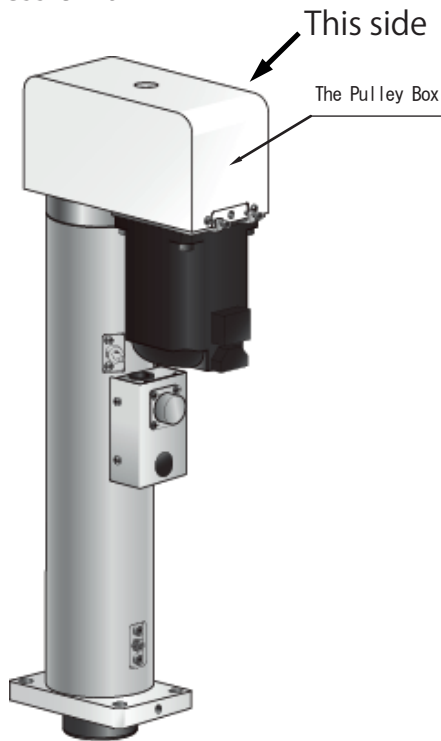

< Controller >

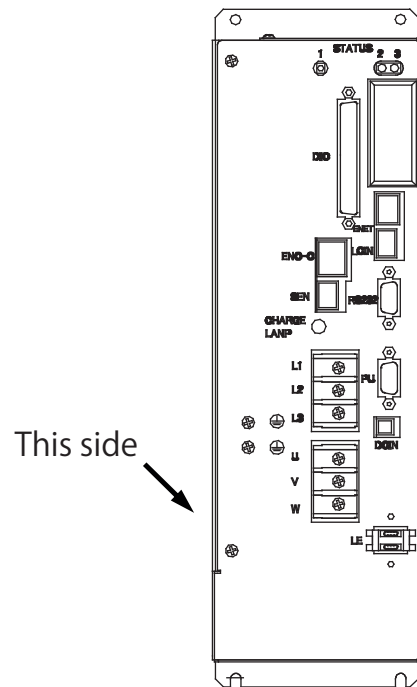

How to Check the Identification Plate

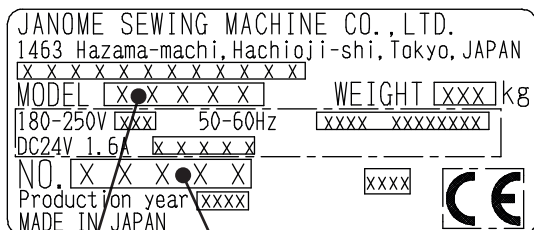

①

②

① Model Number

② Serial Number

Example: 10S10000001



①

②